


# Silencer 40 dB (A): High Noise Reduction Type Series ANA1

RoHS

A high noise reduction type silencer keeps the noise level inside a plant below 85 dB (A).

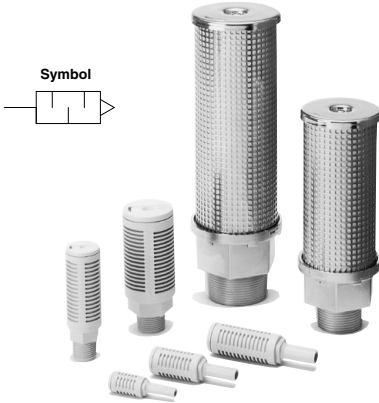

## How to Order

**ANA1-03**

### Port size

Symbol	Port size	Connection
01	1/8	Screw-in *
02	1/4	
03	3/8	
04	1/2	
06	3/4	
10	1	
12	1 1/4	
14	1 1/2	
20	2	One-touch fitting
C08	ø8 (Applicable One-touch fitting size)	
C10	ø10 (Applicable One-touch fitting size)	
C12	ø12 (Applicable One-touch fitting size)	

\* Only R is available.

### Series

Symbol	Noise reduction
A1	40 dB (A)

## Specifications

Fluid	Compressed air
Max. operating pressure <sup>(1)</sup>	1.0 MPa
Noise reduction	40 dB (A) <sup>(2)</sup>
Ambient and fluid temperature	5 to 60°C

Note 1) It indicates the inlet pressure for solenoid valve.

Note 2) The value may vary, depending on the pneumatic circuit or pressure that is exhausted from the solenoid valve.

Refer to page 678 for Precautions on these products.


## Model (Screw-in connection)

Model	Port size R	Effective area (mm <sup>2</sup> )	Sonic conductance C [dm <sup>3</sup> /(s·bar)]	Weight (g)	Dimensions (mm)		
					A	B	C
ANA1-01	1/8	10	2	4	37	16	—
ANA1-02	1/4	15	3	14	64	22	18
ANA1-03	3/8	35	7	22	84	25	21
ANA1-04	1/2	60	12	36	98	30	24
ANA1-06	3/4	90	18	110	111	46	36
ANA1-10	1	160	32	180	132	50	41
ANA1-12	1 1/4	280	56	544	200	74	60
ANA1-14	1 1/2	450	90	612	230	74	60
ANA1-20	2	610	122	873	271	86	70


Note) Recommended flow rate is the flow at 0.5 MPa in the inlet pressure.

## Construction/Parts/Dimensions

### ANA1-01 to 06

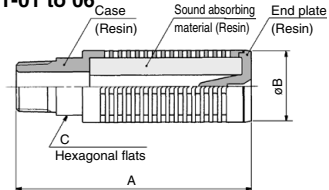

### ANA1-10 to 20

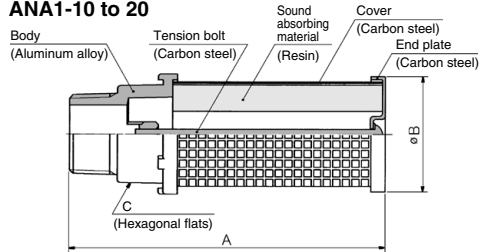


## Model (One-touch fitting connection)

Model	Applicable One-touch fitting size	Effective area (mm <sup>2</sup> )	Recommended flow (m <sup>3</sup> /min (ANR))	Weight (g)	Dimensions (mm)	
					A	B
ANA1-C08	ø8	11	0.8 or less	5	58	16
ANA1-C10	ø10	15	1.2 or less	13	76	22
ANA1-C12	ø12	33	2.5 or less	19	95	25

Note) Recommended flow rate is the flow at 0.5 MPa in the inlet pressure.

## Construction/Parts/Dimensions

### ANA1-C08 to C12

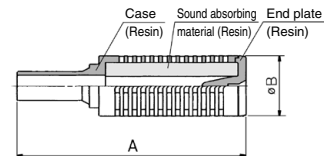

# Silencer 38 dB (A): High Noise Reduction Type Series ANB1

RoHS

Series ANB1 <noise reduction effect: 38 dB (A)> that has a larger effective area with the same port size as Series ANA1. It is also available for common exhaust from manifolds, etc.



## How to Order

ANB1 - 03

### Port size

Symbol	Port size	Connection
01	1/8	Screw-in*
02	1/4	
03	3/8	
04	1/2	
06	3/4	
10	1	
12	1 1/4	
14	1 1/2	
C06	ø6 (Applicable One-touch fitting size)	One-touch fitting
C08	ø8 (Applicable One-touch fitting size)	
C10	ø10 (Applicable One-touch fitting size)	

\* Only R is available.

### Series

Symbol	Noise reduction
B1	38 dB (A)

## Specifications

Fluid	Compressed air
Max. operating pressure <sup>(1)</sup>	1.0 MPa
Noise reduction	38 dB (A) <sup>(2)</sup>
Ambient and fluid temperature	5 to 60°C

Note 1) It indicates the inlet pressure for solenoid valve.  
Note 2) The value may vary, depending on the pneumatic circuit or pressure that is exhausted from the solenoid valve.

Refer to page 678 for Precautions on these products.


## Model (Screw-in connection)

Model	Port size R	Effective area (mm <sup>2</sup> )	Sonic conductance C [dm <sup>3</sup> /(s·bar)]	Weight (g)	Dimensions (mm)		
					A	B	C
ANB1-01	1/8	15	3	10	51	22	-
ANB1-02	1/4	35	7	22	81	25	18
ANB1-03	3/8	60	12	35	93	30	21
ANB1-04	1/2	90	18	94	107	46	24
ANB1-06	3/4	160	32	175	133	50	41
ANB1-10	1	280	56	462	190	74	41
ANB1-12	1 1/4	450	90	612	230	74	60
ANB1-14	1 1/2	610	122	871	271	86	70


Note) Recommended flow rate is the flow at 0.5 MPa in the inlet pressure.

## Construction/Parts/Dimensions

### ANB1-01 to 04

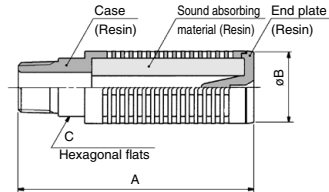

### ANB1-06 to 14

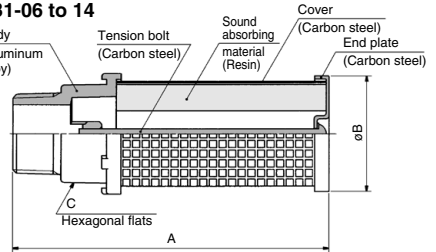


## Model (One-touch fitting connection)

Model	Applicable One-touch fitting size	Effective area (mm <sup>2</sup> )	Recommended flow (m <sup>3</sup> /min (ANR))	Weight (g)	Dimensions (mm)	
					A	B
ANB1-C06	ø6	8	0.6 or less	5	52	16
ANB1-C08	ø8	13	1.0 or less	12	73	22
ANB1-C10	ø10	28	2.0 or less	28	94	25

Note) Recommended flow rate is the flow at 0.5 MPa in the inlet pressure.

## Construction/Parts/Dimensions

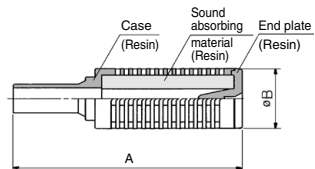

AN  
VCHN  
AMC  
AMV  
AMP



## Series AN

# Specific Product Precautions (Silencers)

Be sure to read before handling.

### Design

#### Warning

1. The exhaust port could become blocked by the clogging of the exhaust cleaner.

Therefore, make sure to provide a safe design so as not to cause the whole system to malfunction.

#### Caution

1. The silencer is intended to reduce the noise of exhaust air of the compressed air emitted from pneumatic equipment.

Noises other than exhaust air (noise generated inside piping, noise generated by vibration of equipment, noise of switching valves, etc.) cannot be reduced.

Take appropriate measures to find the cause of noises other than those generated by exhaust air.

The product does not function as a filter. Do not use the product as a filter regardless of negative and positive pressures.

The following table shows reference nominal filtration ratings. These nominal filtration ratings are reference values and are not guaranteed.

Series	Nominal filtration rating (Reference values)
AN05 to 40	100 μm
AN10 to 30-C	100 μm
AN□00	150 μm
25□□	—
AN101_110	100 μm
AN120	70 μm
AN□02	50 μm
ANA1	30 μm
ANB1	30 μm
VCHN	—

\* Not required for Series AMV and AMP.

2. If the compressed air supply is contaminated with fluids such as oil and oil mist, such fluids will be dispersed to the environment.

In such a case, an exhaust cleaner is recommended to recover fluids and reduce noise.

3. The silencing effect could vary depending on the pneumatic circuit or the pressure that is used.

### Selection

#### Caution

1. When selecting the silencer, the sonic conductance\* (including combined sonic conductance) of the silencer should be larger than that of the solenoid valve.

\*Sonic conductance C [dm<sup>3</sup>/(s·bar)] = Effective area [mm<sup>2</sup>] ÷ 5

2. Use within the range of specifications.

### Operating Environment

#### Warning

1. Do not use in an atmosphere having corrosive gases, chemicals, sea water, water, water steam, or where there is direct contact with any of these.

Refer to the construction drawings for silencer materials.

2. Avoid exposure to direct sunlight.
3. Do not operate in locations where vibration or impact occurs.
4. Do not use the product in locations where it is near heat sources and exposed to radiation heat.
5. Do not use in an environment where the product is exposed to cutting oil, lubricating oil, or coolant, etc. If it is used in an environment where there is possible contact with cutting oil, lubricating oil, or coolant, exercise preventive measures.

### Operating Environment

#### Warning

6. Do not use in an environment where foreign matter may stick to the product or get mixed in the product's interior.

It may result in clogging at an early stage, coming off or causing damage.

### Mounting

#### Caution

1. If the silencer body (case) is made of plastic and is tightened too much, the silencer may be damaged.

2. Tightening by using a pipe wrench or pliers may cause damage to the silencer. This method is not recommended.

Please follow the procedures below for mounting.

##### ■When the body (case) is made of resin

Hold the tip of the main body (the side without thread) and screw it in.

At the point where the thread begins to feel tight, use a wrench on the hexagonal flats to tighten an additional 1/4 turn.

For the model without the hexagonal flats, be sure to securely tighten by hand. For the model with the M-thread, tighten the tip of the main body securely by hand until it is in contact with the end face, and then retighten it by hand. At this time, note that the retightening amount should be 30° or less.

##### ■For BC elements

Hold the tip of the main body (the side without thread) with your fingers and screw it in tightly.

Do not hold the sintered metal part with a wrench, etc. to tighten.

##### ■When the main body is made of metal (Except BC elements)

Within the recommended tightening torque shown in the chart below, use a wrench on the hexagonal flats and tighten.

Tightening by using a pipe wrench or pliers may cause damage to the silencer. This method is not recommended.

### Tightening Torques for Silencers

Connection thread	Applicable tightening torque (N·m)
R 1/4	12 to 14
R 3/8	22 to 24
R 1/2	28 to 30
R 3/4	28 to 30
R 1	36 to 38
R 1 1/4	40 to 42
R 1 1/2	48 to 50
R 2	48 to 50

3. Make sure not to apply a lateral load to the body during or after the installation.

4. When the silencer body is loosened by vibration, etc. of equipment on which a silencer is assembled, apply glue to threads to prevent loosening and reattach.

### Maintenance

#### Caution

1. Never disassemble the silencer.

The silencing material is not replaceable.

2. If the exhaust speed drops and the system performance decreases due to clogging, replace with a new silencer.

Make sure to verify the operating conditions of the actuator at least once a day.

3. If operation continues when it is clogged, breakage can result.